SCOSCHE

NN1646B

IN-DASH DOUBLE DIN INSTALLATION KIT FOR 2002-04 NISSAN ALTIMA

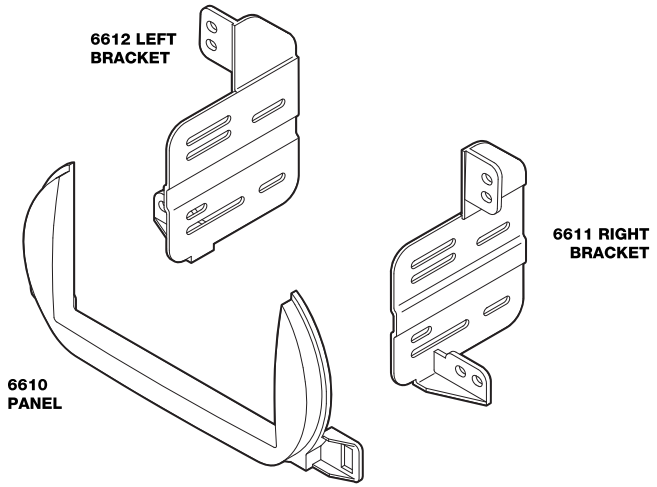

INTRODUCTION/PRELIMINARY

This premium installation kit is for 2002-04 Nissan Altima vehicles. Included are all the parts you need to mount your car stereo or CD player into your vehicle's dash. Refer to the individual instruction in this manual to remove your vehicle's factory radio and assemble the kit.

CAUTION

DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIRBAG WIRING - AIRBAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

CAR STEREO CONNECTORS

PROVIDE EASY CONNECTION OF YOUR CAR STEREO TO FACTORY WIRING HARNESS.

NNO3B
1995-Up Nissan

NDAB
Nissan Diversity Antenna Adapter

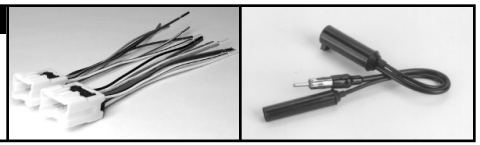

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (NN1646B) in 2002-04 Nissan Altima vehicles. Scosche Industries, Inc. cannot be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

©2008 SCOSCHE INDUSTRIES, INC.

SI 4/08 NN1646B (3000003)

FACTORY STEREO REMOVAL

2002-04 NISSAN ALTIMA

1. Remove climate control dash bezel.
2. Extract (1) Phillips head screw on right side of stereo securing stereo bezel, remove bezel.
3. Extract (4) Phillips head screws securing stereo, unplug and remove.

MOUNTING THE STEREO

DOUBLE DIN-ISO MOUNT

1. Mount 6611 right and 6612 left brackets to stereo using screws supplied with aftermarket stereo.
2. Secure aftermarket stereo and 6611/6612 bracket assembly to dash using the (4) Phillips screws that were securing the factory stereo.
3. Snap 6610 mounting panel to stereo dash bezel and finish reassembly.

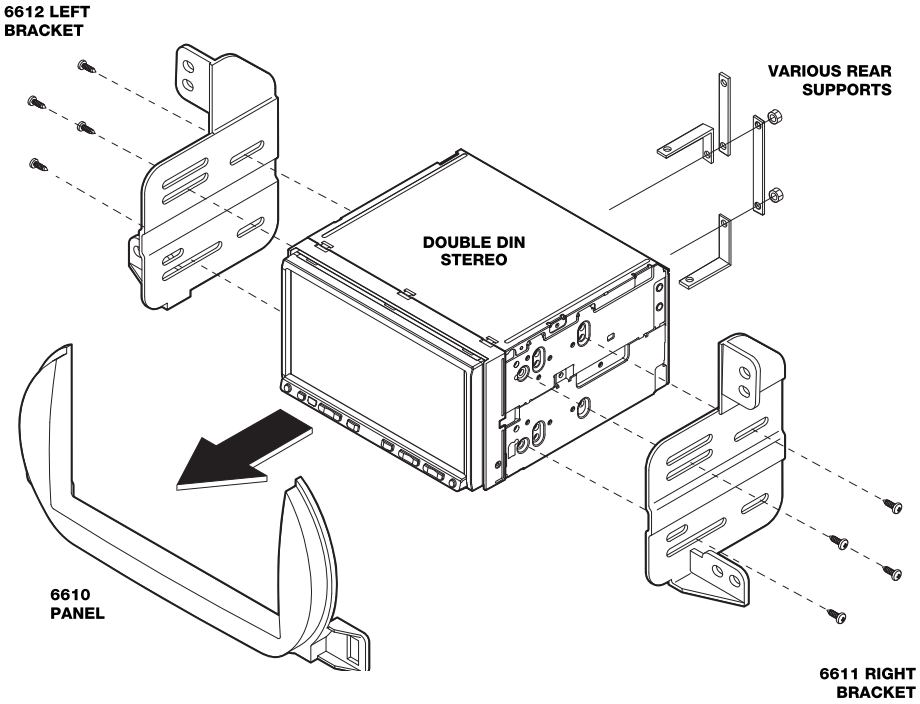

NOTE:
REAR SUPPORT AVAILABLE SEPARATELY. REAR SUPPORTING THE STEREO ADDS TO THE INSTALLATION'S STRUCTURAL INTEGRITY.